English



Instruction Manual DIGITAL VACUUM GAUGE - 98061

Mastercool's Hand-Held Vacuum Gauge (98061) is built with a high quality thermocouple sensor and microcomputer. This unit has measurement capability ranging from atmosphere to 1 micron.

SPECIAL FEATURES

- Automatic Warm-up
- · Low Battery Indicator
- Programmable Vacuum Level Light
- Replaceable Sensor (no calibration required)
- Sensor or Cable Disconnect Indicator (displays 유유유유 with Red LED)
- Protective Rubber Boot for Durability
- Heavy Duty Hook folds back into unit for compact storage
- AC/DC Connector capability
- · Auto-Off after 10 minutes with disabling capability



Sensor Assembly
Cable and Socket Assembly
1/8" NPT x 1/4" F-FL Swivel Adapter
9V DC Battery
110V AC/DC Adapter
220V AC/DC Adapter
1/4 FL-M x 1/4 FL-M x 1/4 FL-F Tee

Part #98061-SENSOR
Part #98061-002
Part #99332
Part #98210-A-BAT
Part #99334-110 (optional)
Part#99334-220 (optional)
Part #99333 (optional)

SPECIFICATIONS

- Response Time: 250 mSec.
- Sensor Cable: Spiral cable extended to 6.5 ft (2.6 m)
- Sensor: Thermocouple sensor
- Connection Fitting: 1/4" flare female adapter
- Operating Temperature: 32 to 120°F (0 to 45°C)
- Power: 9V DC battery (AC/DC Adapter Optional)
- . Battery Life: 15 hours
- Low Battery Indicator: Special ICON on LCD
- Vacuum Units: Micron, Torr, mTorr, mmHg, mBar, Pa

BATTERY INSTALLATION

Remove the screw and battery compartment cover. Make sure to place the battery into the compartment with the correct polarity. Replace battery cover and screw.

BASIC SET-UP

The microcontroller will keep these set-ups in its memory until a new setting is required.

• Press the **ON/OFF** button to turn the unit ON. The unit will warm-up by displaying ¬¬¬¬¬, 999999, 888888,200000.------ATM will be displayed when the unit is ready.

Auto-Off Set-Up:

The unit is set to power off after 10 minutes. The operator can disable this function by pressing the **ENTER** button to select [XBABL] (disable) or [ABBL] (enable). This setting will remain in the memory each time the unit is turned on.

Unit Selection:

Press the **UNIT** button to select the desired unit. This UNIT will remain in the memory each time the unit is turned on.

Vacuum Level Target Setting:

Press the **INDICATOR VALUE** button once and then press **UNIT**/↑ or **INDICATOR VALUE**/↑ to select the desired target value. Press **ENTER** to confirm the setting. This setting will remain in the memory each time the unit is turned on.



OPERATIONS


- Press the **ON/OFF** button to turn the unit on. The unit will warm-up by displaying ¬¬¬¬¬, 999999, 888888, \(\mathcal{2000}\)2003\(\alpha\)2003\(\alp
- Once warm-up is complete, connect the vacuum gauge to the system and start the vacuum pump. The vacuum countdown will start from atmospheric pressure (ATM) -----. Depending on the size of the system it may take some time for the numeric vacuum reading to appear on the LCD. The numbers descend from 20,000 Microns or corresponding units. Once the target level is reached and passed the indicator light will come on. If the vacuum gauge is set at ENABLE, the gauge will power off after 10 minutes. Simply press the ON/OFF button and allow 30 seconds for warm-up and true vacuum reading to appear.
- Press the **ON/OFF** button to turn the unit off.

WARNING!!

Never stop the vacuum pump unless the vacuum gauge is disconnected from the system. Failure to do so may create a higher pressure in the system that can cause oil to enter the sensor chamber.

CLEANING THE SENSOR

Observe the gasket after each vacuum. If oil is present, it is possible that there is a presence of oil in the sensor chamber. Follow these instructions:

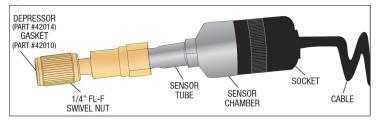

- 1. Disconnect the sensor chamber from the socket.
- 2. Remove the gasket & depressor from the assembly to clean.
- Clean the gasket. Rinse the sensor chamber with acetone. Repeat until the oil is completely removed. Allow 2 – 4 hours for all of the parts to dry and evaporate.
- 4. Reassemble all of the parts and check the unit.

TROUBLESHOOTING:

Low Battery Indicator:



A special icon will appear in the upper right hand corner of the LCD when the battery must be replaced.

No Display:

Check the battery and polarity.

888888

\(\ext{\tin}\text{\tetx{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\tin}\text{\text{\text{\text{\text{\texi}\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text

WARNINGS









Wear Safety Glasses Wear Gloves

Keep in a dry place. Do not allow moisture to enter the unit.

WARRANTY

This product warrants against defects in material and workmanship for a period of one year. This warranty does not cover failure due to abuse, improper usage, or progressive wear and tear.

Warranty becomes valid to the original user, effective on the puchase date. A copy of an invoice along with a registration card must be sent to 1 Aspen Drive, Randolph, NJ 07869 to validate the warranty.

For further service please contact (973) 252-9119.